


# CARGO BOX


INSTRUCTION BY PURCHASED OPTION

## SW-KC-115-B

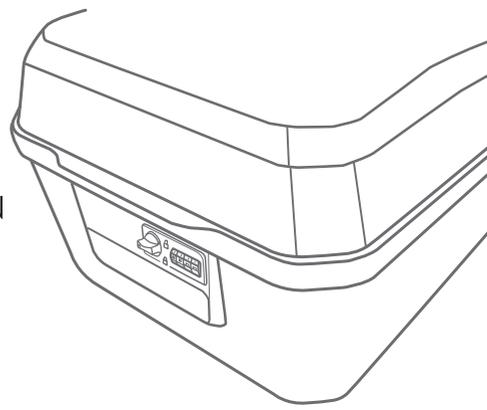

### How to operate your lock?


■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

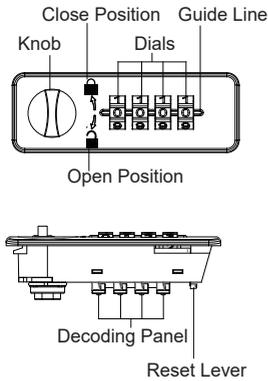

#### TO OPEN:


Turn the dials and align the opening combination numbers with the Guide Line.

Turn the knob to the open position.

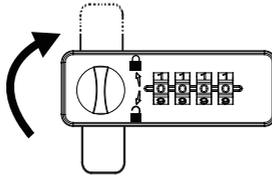

#### TO LOCK:

Turn the knob to the close position.

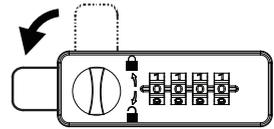

■ Due to various cabinets, you may need to turn the "Knob" 90° or 180° to operate your lock.

### How to reset your combination?

■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

1. Leave the dials at preset combination 0-0-0-0. (Fig. A)
2. Turn the Knob to the open position. (Fig. B)
3. Push the Reset Lever on the back of lock from "A" to "B" position. (Fig. C) Set your own desired combination.
4. Return the Reset Lever back to "A" position. (Fig. D) Your lock is now ready to open at its new combination.

 


Fig. A

 


Fig. B

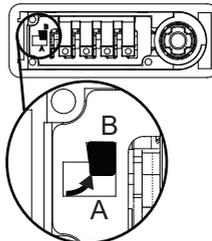


Fig. C

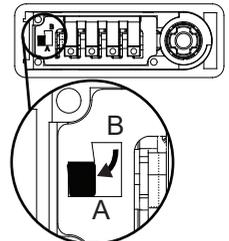


Fig. D